

**Ebersapcher Easy Start Select Wiring**



This controller does not have an internal temperature sensor, if an external sensor (sold separately) is not connected the heater senses temperature based on return air temperature.

Main Wiring Loom	Easy Start Select Controller Wires
Blue / White	Blue / White
Red	Red
Brown	Brown
Brown / White join to Red / Grey (Note 1)	External Temperature Sensor
Grey (Note 2)	External Temperature Sensor

Note 1: Brown / White must be joined to Red / Grey for heater to sense the ambient temperature

Note 2: In Dieselheat Marine D2 Kits this wire is Yellow.

All unused wires to be folded back and taped to ensure they cannot touch.



External Air Temp Sensor