

# OPERATION GUIDE

3009 ADVANCED CONTROL PANEL | Stoves 600D & 1200D

Please Refer to Manual for Full Operation and Maintenance Instructions at [wallas.com](http://wallas.com)

## DIGITAL PANEL LEGEND




- ① Main Menu Bar
  - Manual Mode
  - Settings
  - Temp Sensor (must be wired)
  - Device Info
  - Device Stats
  - Clear Lock
  - Temp Unit (C°/F°)
  - Connections
  - Altitude
- ② Power Level 1 - 6
- ③ Stove Status
- ④ Start/Stop Icon
- ⑤ Info Bar
  - Power On/Off
  - Combustion
  - Info
  - Lock
  - Stove power %

## BUTTONS



- Select Button**
- Left Arrow**  
Move cursor left or up
- Right Arrow**  
Move cursor right or down

## 1200D

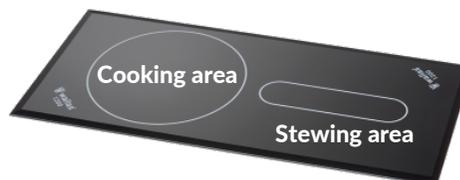


## SCAN FOR MANUALS



## IGNITION


To start, use the **Arrow Buttons** to move the orange selection square to the white **Start/Stop Icon** and press the **Select Button**. Confirm the selection by holding the **Select Button** down for 3 seconds (safety feature). White icon turns orange.

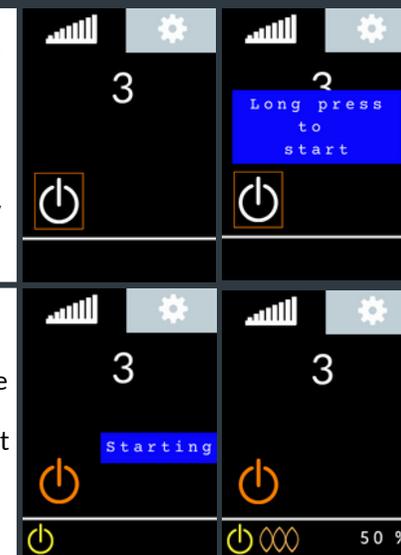

*Starting* will appear on the screen. The light orange combustion light will light up when the burner flame has been ignited and the combustion has stabilized (in about 5 min). Stove will be fully operational about 10 min later.

## POWER LEVEL SETTING

Use the **Arrow Buttons** (left or right) to move the orange selection square to the **Main Menu Bar**. Press **Select Button** to activate the **Main Menu Bar**. Use **Arrow Buttons** to choose the **Manual Mode** and press the **Select Button** to select.

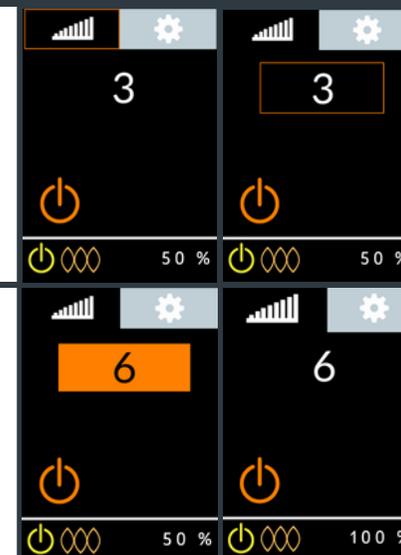


Use the **Arrow Buttons** to move the orange selection square to the **Power Level** and press **Select Button** (picture 2).

Press **Arrow Buttons** to set the desired power level (1-6).

## SHUT DOWN

 Quick shut down:  
Press and hold the **Select Button** down for more than 4 seconds.

*Stopping* will appear and the Power Icon light will change to white indicating the unit is off.

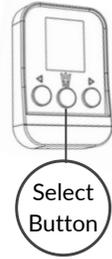


Alternatively use the **Arrow Buttons** to move the selection square to the **Start/Stop Icon** and press the **Select Button**.



Press and hold the **Select Button** down for more than 2 seconds.




*Stopping* will appear and the Power Icon light will change to white indicating the unit is off.

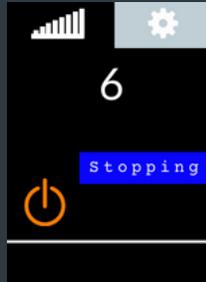

## SETTINGS

Get familiar with the control panel's functionality. Read more from User Manual.

Move the selection square to the **Main Menu Bar** and press the **Select Button**. Use the **Arrow Buttons** to choose **Settings**. Press the **Select Button**.

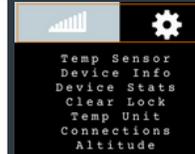


Use the **Arrow Buttons** to move the selection square down and press the **Select Button** to choose.




The stove operation can be optimized to different altitudes.

 Select the altitude from settings before starting the unit.

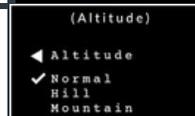


Device stats can be checked from settings  
Voltage  
Usage hours  
System starts  
Pump cycles  
Previous error code

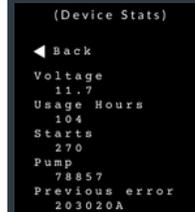

## LOCK

(SAFETY FEATURE)


If a **Lock Icon** is displayed, the device has locked itself for safety. The unit will also lock after 2 unsuccessful starts (first startup). Move the selection square to the **Exclamation Point Icon** and press the **Select Button**. An Error Page will appear.

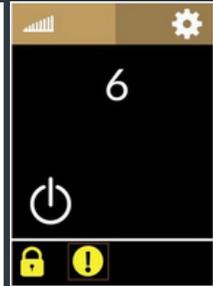

If the device has locked itself, there may have been a failure that should be investigated and resolved prior to further use. The error page will display a check list and a website for further information. If you need help, reach out to a professional.



To remove the lock, press any button to return to the main display. Move the selection square to the **Main Menu Bar** and press the **Select Button**, choose **Settings**, and press the **Select Button**. Choose **Clear Lock** from the Settings Menu and press the **Select Button**.

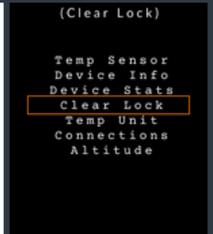

## COOKING PLATE

Clean stove top regularly. Do not use abrasive cleaning sponges or agents.

Select high-quality pots, casseroles and pans and follow the markings in the cooking pots.

