


LCD MINI 7 DAY TIMER SETTING INSTRUCTIONS

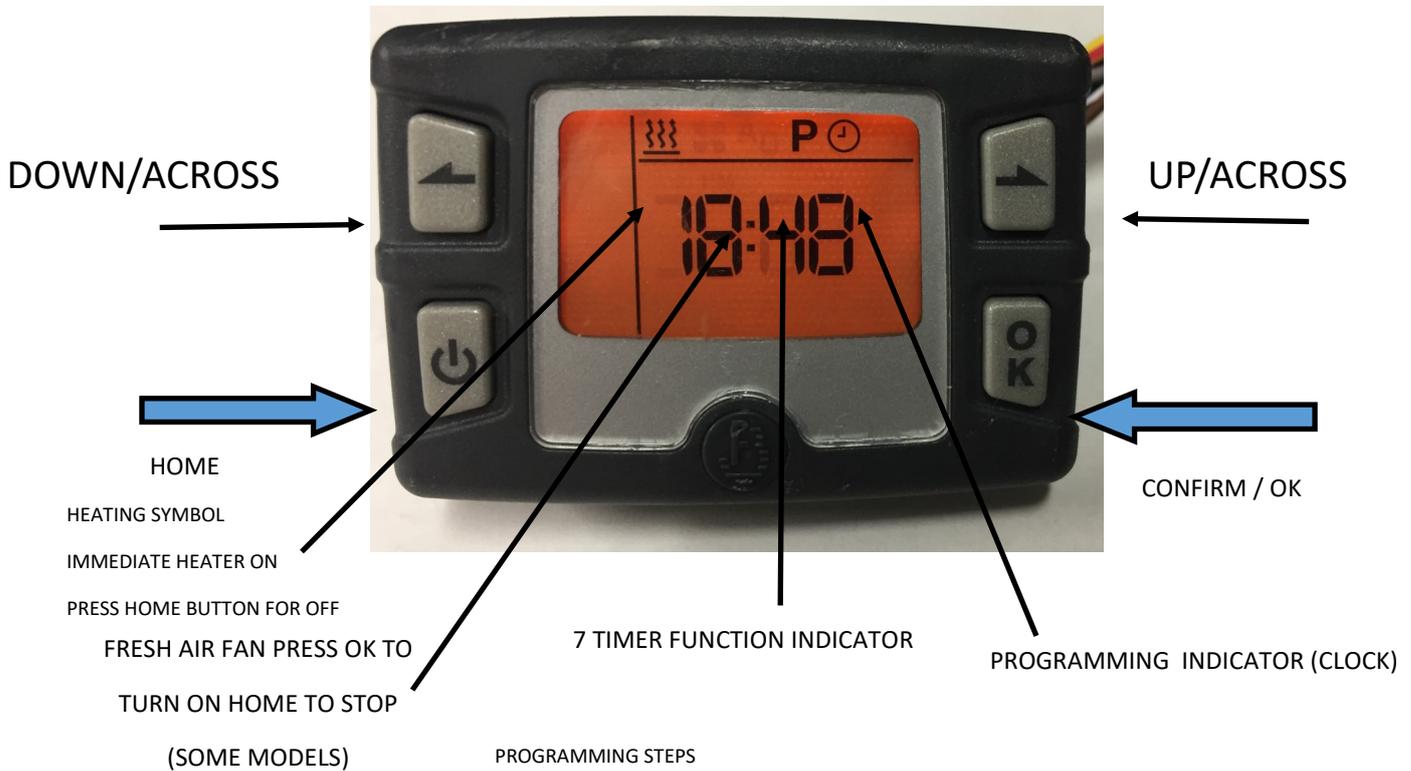

STEP 1 SET TIMER CLOCK

POWER UP , FIRST STEP IS TO SET THE TIME OF DAY (24 HOUR CLOCK)USE UP/ACROSS BUTTON TO INCREASE HOURS PUSH OK TO SET, MINUTES WILL FLASH USE UP/ACROSS BUTTON TO SET MINUTES PRESS OK TO SET , TIME IS NOW SET IT

IF THERE ARE CHINESE SYMBOLS ON THE LEFT HAND SIDE THESE ARE DAYS OF THE WEEK TO CHANGE GO TO STEP 2

STEP 2 CHANGE DISPLAY FROM CHINESE TO ENGLISH

PRESS OK TO WAKE UP CONTROLER

PRESS ARROWUP/ACROSS UNTIL CLOCK SYMBOL IS HILIGHTED

PRESS BOTH ARROW BUTTONS TOGETHER TO ACCESS P1 MENU

PRESS OK TO ACCESS C1 MENU

PRESS OK TO ACCESS 00 MENU

PRESS OK TO ACCESS 01 MENU

PRESS OK TO ACCESS 02 MENU ARROW ACROSS TO HILIGHT ON (= ENGLISH)

PRESS HOME BUTTON TWICE TO RETURN TO MAIN MENU

STEP 3 SET WEEK DAY AND RESET TIME OF DAY

RETURN TO STEP 1 ARROW THROUGH CORRECT DAY PRESS OK PRESS OK FOR THE HOUR PRESS OK FOR THE MINUTES PRESS HOME TO EXIT THE TIME FUNCTION


INSTANT HEAT , ARROW ACROSS TO HEAT SYMBOL PRESS OK

WE ARE NOW READY TO START THE HEATER THE HEATING SYMBOL WILL BE FLASHING PRESS OK TO START ANOTHER HEAT SYMBOL WILL APPEAR BOTTOM LEFT HAND CORNER SHOWING THE HEATER IS ABOUT TO START

PRESS HOME TO STOP HEATER

WHEN HEATER IS IN HEATING MODE IT WILL APPEAR IN POWER MODE (P01 LOWEST P07 HIGHEST) OR TEMPARTURE MODE POWER MODE IS THE MOST EFFICIENT WAY TO RUN THE HEATER YOU CAN CHANGE ITO TEMPARTURE MODE BY PRESSING AND HOLDING THE OK BUTTON TO INCREASE /DECREASE HEATING USE THE UP\ DOWN BUTTONS

TO SET THE TIMER BACK TO FACTORY DEFAULT ARROW ACROSS TO CLOCK SYMBOL PRESS UP\DOWN BUTTONS TOGETHER THIS WILL SHOW 01 PRESS THE ARROW ACROSS BUTTON IT WILL SET BACK TO FACTORY DEAFULT ALL TIMER PROGRAMMING WILL BE ERASED OR SIMPLY REMOVE FUSE WILL DO THE SAME JOB

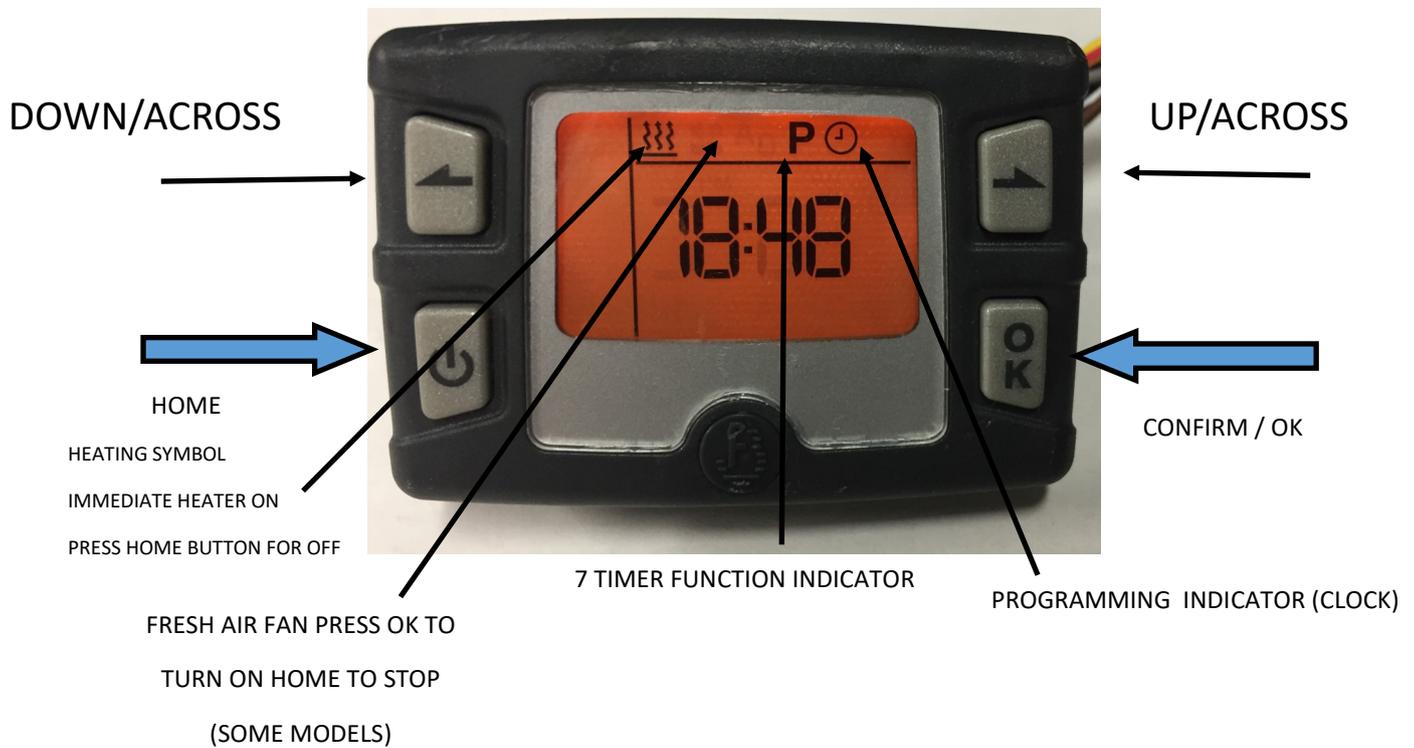

TO PROGRAM THE 7 DAY TIMER

MAKE SURE THE DATE , DAY AND TIME ARE SET CORRECTLY

ARROW ACROSS TO THE P INDICATOR IT WILL START TO FLASH PRESS OK

ON THE LEFT YOU WILL SEE PROGRAM OPTIONS 1, 2 AND 3 (# 1 SETTING WILL BE BLINKING) THESE ARE FOR DIFFERENT OPTIONS OF DAYS SELECT 1 FOR DAYS OF THE WEEK FROM MONDAY TO FRIDAY , SATURDAY AND SUNDAY CAN ALSO BE SELECTED BUT ARE NOT SHOWN

PRESS OK TO SET TO ON

L390 WILL APPEAR WHICH IS THE HEATING TIME IN MINUTES UP OR DOWN ARROW TO SELECT HEATING TIME PRESS OK AFTER SELECTION

START TIME WILL APPEAR 24 HOUR CLOCK UP DOWN TO SELECT HOURS PRESS OK UP/DOWN TO SELECT MINUTES PRESS OK

SET DAY OF THE WEEK USING THE ACROSS BUTTON SELECT ON\OFF TO SET THE HEATER TO START ON THAT DAY

IT WILL NOW SHOW THE DAYS ON THE DAY LIST THAT THE HEATER HAS BEEN PROGRAMMED TO START

PRESS HOME BUTTON TO RETURN TO THE MAIN SCREEN WILL SHOW THE TIME OF THE DAY

IF YOU WANT TO KNOW WHAT TIME THE HEATER HAS BEEN PROGRAMMED TO START ON PARTICULAR DAYS ARROW ACROSS TO THE P SYMBOL PRESS ENTER AND 1 AND ARROW THROUGH TO THE DAY AND PRESS OK , TO CANCEL THE HEATING ARROW ACROSS TO TURN OFF

TO SET BACK TO FACTORY DEAFULT ARROW ACROSS TO CLOCK PRESS UP\DOWN ARROWS TOGETHER WILL SHOW 01 PRSS ACROSS ARROW WILL RESET TO FACTORY DEFAULT

ASK FOR THE VIDEO LINKS FOR YOU TUBE FOR LCD TIMER OPERATION